

RMS132 Splitter

Features

- ❖ Standard 19" Rack Mount Configuration
- ❖ Passes GPS, Galileo & GLONASS L1/L2
- ❖ Numerous Options Available



Description

The RMS132 Rack Mount Splitter is a one-input, thirty-two-output GPS signal divider. This product typically finds application in a facility where an input from a single active GPS roof antenna is split evenly between thirty-two outputs to create an indoor GPS signal distribution network. Typically the RMS132 is configured with an 110VAC input (230VAC also available) and a regulated DC output voltage is passed to the antenna input port in order to power an active GPS antenna on that port. In this scenario, the RF outputs (J1 – J32) would feature a 200 Ohm DC load to simulate an antenna DC current draw for any receiver connected to those ports.

The RMS132 splitter comes with many available options to meet your specific needs. Please call, fax, email (sales@gpssource.com), or visit our website (www.gpssource.com) for further information on product options or specifications

RMS132 Splitter

Electrical Specifications, Operating Temperature -40 to 85 °C

Parameter	Conditions	Min	Typ	Max	Units
Freq. Range	Ant – Any Port, Unused Ports - 50 Ω	1.2		1.6	GHz
In/Out Imped.	Ant, J1-J16		50		Ω
Gain	Ant – Any Port, Unused Ports - 50 Ω				
-Amplified (Std.)		3	4	5	dB
-Amplified (Cust) ¹		0	TBD	16	
Input SWR	All Ports 50Ω			2.0:1	-
Output SWR	All Ports 50Ω			2.0:1	-
Noise Figure	Ant – Any Port, Unused Ports - 50 Ω			3	dB
Gain Flatness ⁽⁴⁾	L1 - L2 , Ant – Any Port, Unused Ports - 50 Ω			3	dB
Amp. Balance	J1 - J2 , Ant – Any Port, Unused Ports - 50 Ω			0.5	dB
Phase Balance	Phase (J1 - J2), Ant – Any Port, Unused Ports - 50 Ω			1.0	deg
Group Delay Flatness ⁽⁴⁾	T _{d,max} - T _{d,min} , Ant – Any Port			1	ns
Isolation	Measured at 1227MHz and 1575MHz				
-Amplified (Hi Iso.)	Adjacent Ports: Ant - 50Ω	24			dB
	Opposite Ports: Ant - 50Ω	38			dB
AC IN	110	Wall Mount Transformer ⁽³⁾		110	VAC
	220/240	Wall Mount Transformer (Various Intl. plug types available) ⁽³⁾		230	VAC
DC IN	DC Blk	Any DC Blocked Port with a 200 Ω Load		14	VDC
	Pass DC -Amplified	Non-Powered Configuration, DC Input on J1		3	VDC
	Powered	Powered, Mil. Conn. or w/ leads Option		3 ⁽²⁾	28 ⁽²⁾
Device Current	Current Consumption of device, excludes Ant. Cur.			80	mA
Output Current	Input port			100 ⁽³⁾	mA
Max RF Input -Amplified	Max RF input without damage			0	dBm

Notes:

1. Custom gain options available
2. DC IN for powered option must be 2V greater than desired DC Voltage Out
3. Maximum combined DC current draw out all ports of the device is a function of the DC input voltage and desired DC output voltage , according to the following:

$$I_{out} \leq 1.4 / (V_{DC IN} - V_{DC OUT}) - 0.080 \text{ Amps}$$

For powered option with a wall mount transformer (Voltage Input = 110/220/240 VAC), V_{DC IN} is 9V.

4. With variable gain option, gain flatness is 5.



RMS132 Splitter

Available Options:

Power Supply Options:		
Source Voltage Options	Voltage Input	Type
	110 VAC	Wall Mount Transformer
	220 VAC	Wall Mount Transformer
	240 VAC (U.K.)	Wall Mount Transformer
	DC 5-28 VDC	Military Style Connector or w/ Leads
Output Voltage Options ⁽¹⁾	DC Voltage Out	
	3.3	
	5	
	7.5	
	9	
	12	
	Variable (3-12V)	
Custom		
RF Connector Options:		
Connector Options	Connector Type	Limitations
	N (Male & Female)	
	SMA (Male & Female)	
TNC (Male & Female)		
Housing Options:		
Housings	Housing Type	Limitations
	19 x 8 x 1.75 in Rack Mount	None
Port Options:		
DC Blocked ⁽¹⁾	J1 – J32 are DC Blocked & 200Ω Loaded, DC is passed J1 to ANT	

Notes:

1. RF outputs are DC Blocked standard. Call for special pass DC configurations.

RMS132 Splitter

Part Number

RMS116 – AXX – P110 / 5 – NF

Product:

Standard 1x32 Splitter
(Pass DC J1-Ant, J2 – J32 DC Blk.)

Gain Option:

A – Amplified

Source Voltage:

P110 – Transformer,
P220 – Transformer,
P240 – Transformer,
PDC – DC w/leads
PM – Military Connector (User supplies DC)

Output Voltage:

3.3, 5, 7.5, 9, 12, XX, V – Denotes Output Voltage
(XX – custom output voltage, V – variable)

Connector Options:

NF – N, Female
SF – SMA, Female
TF – TNC, Female

For help in creating the part number to meet your exact needs, contact us at Sales@gpssource.com or visit our website at www.gpssource.com.